


AD5030 - Classic Adirondack [37 lbs]*

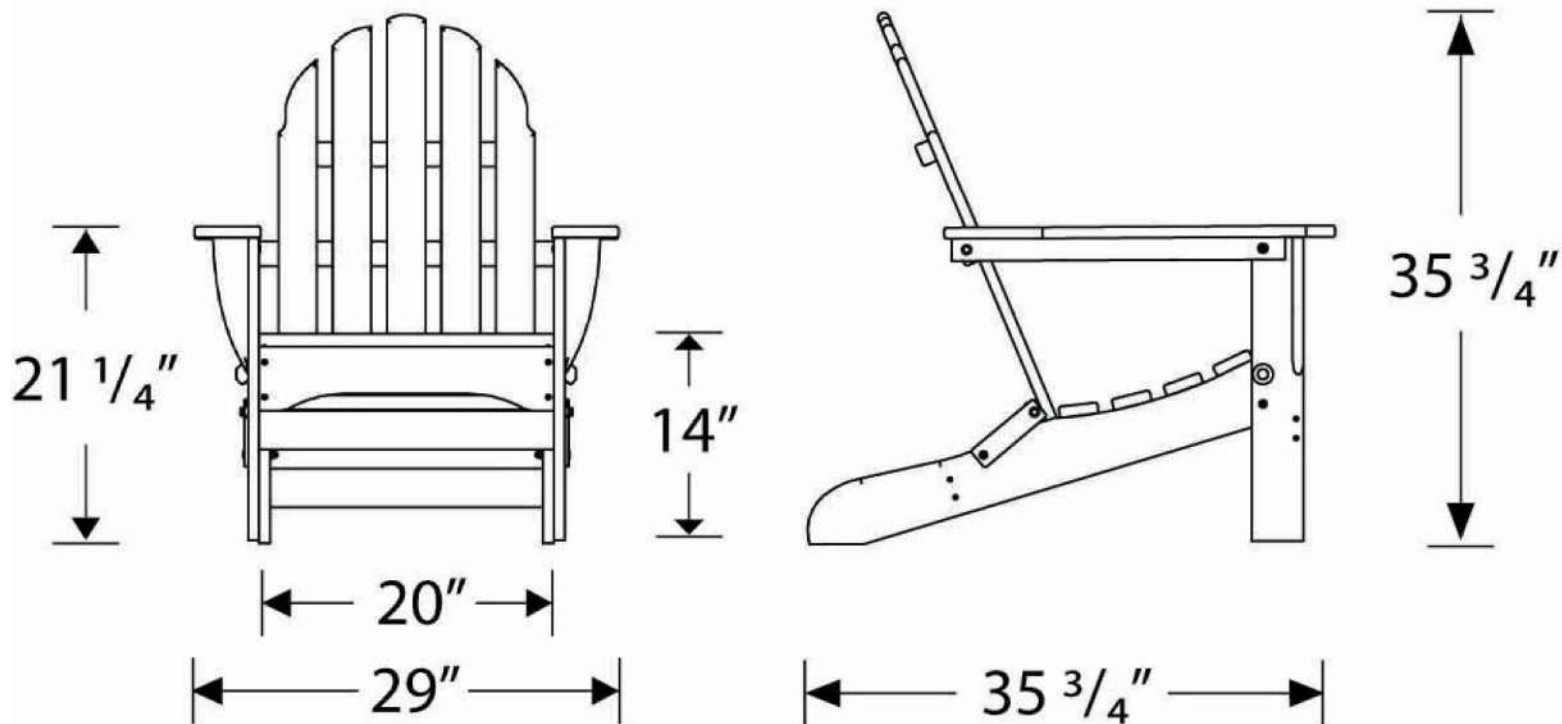

POLYWOOD®

Intelligent Design™

Model: AD5030, AD5031
AD6030

Step 1

Unfold chair assembly

Step 2




Insert (2) 2 1/4" bolts, washers and locknuts
into pre-drill holes
Then insert pins



TOOLS NEEDED

4MM HEX KEY, ALLEN, T-HANDLE
(INCLUDED)


Qty.	Description
2	3/4 X 2 ADIRONDACK PIN HDPE
2	A - 1/4-20 X 2-1/4 WAFER SHCS
2	B - 1/4 FLAT WASHER
2	B - 1/4-20 NYLOCK NUT

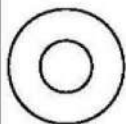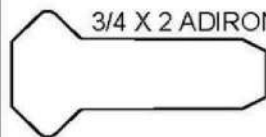


ASSEMBLY INSTRUCTIONS

HARDWARE IS COATED STAINLESS STEEL UNLESS OTHERWISE SPECIFIED


Step 1

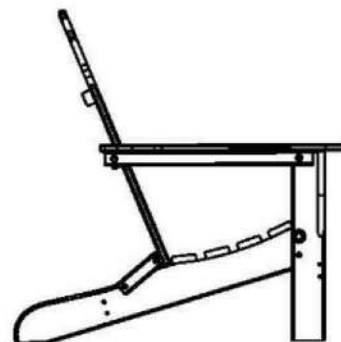


Correct

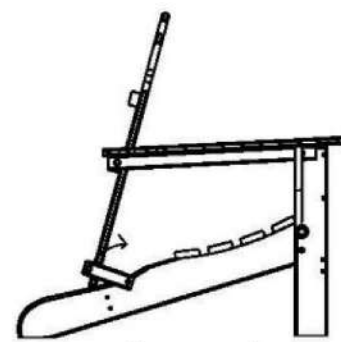

Incorrect

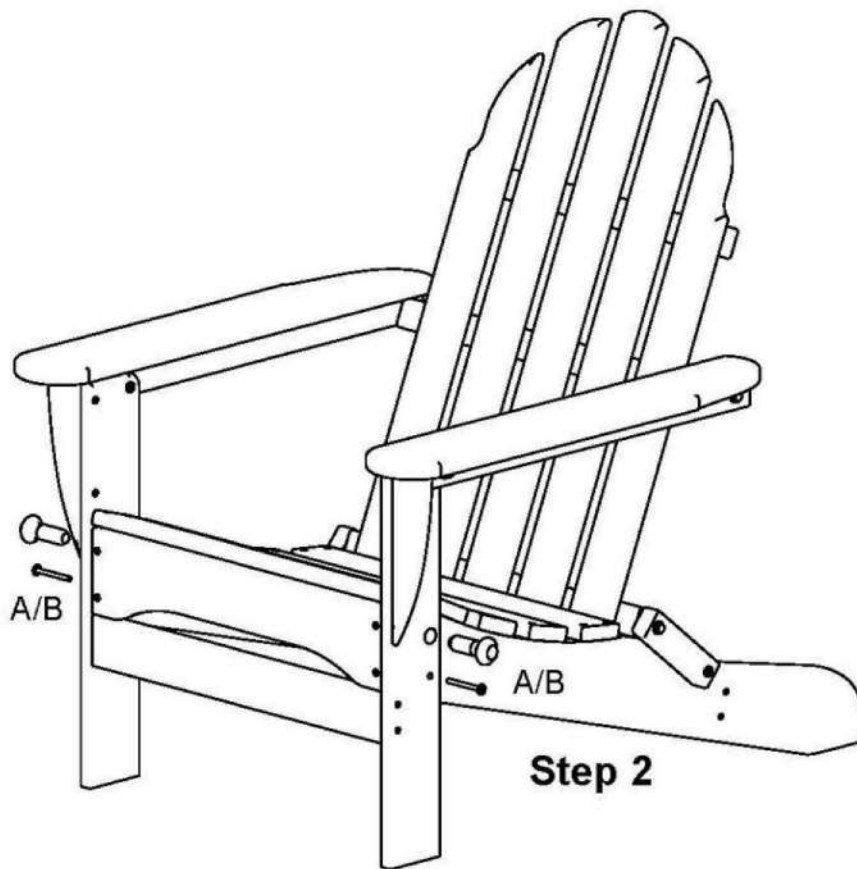

Step 2

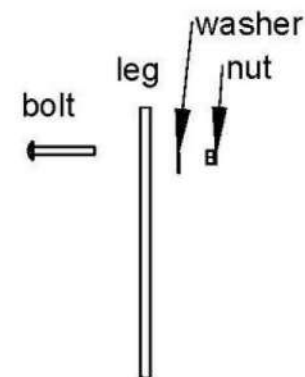

11/21/2012